 


# USER MANUAL

 
- 1. Movement Speed:** In room temperature (20 – 30°C) and flat floor conditions (EU 2 and above standard), accelerate the trolley gradually, then maintain: Caster of  $\varnothing \leq 75\text{mm}$ :  $\leq 2\text{km/h}$ . Caster of  $\varnothing > 75\text{mm}$ :  $\leq 4\text{km/h}$ .
- 2. Pay attention, observe and drive the trolley to avoid obstacles, bad surfaces** due to impact and vibration will cause caster to wear quickly or may be damaged.
- 3. Do not let casters and hand trucks operate continuously for a long time.** Because friction during operation will increase the temperature at the contacts and joints, accelerating wear and aging.
- 4. Maintenance:** monthly or quarterly cleaning dirt, removing fibers, hair, and dust wrapped around the axle and rotating neck of the wheel. Proceed to lubricate the if needed.




## FOLLOW THE GUIDELINES FOR SAFE USE

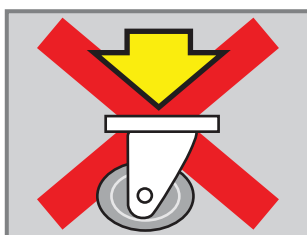

Do not overload the load indicated on the Catalog and guidance of the sales staff.

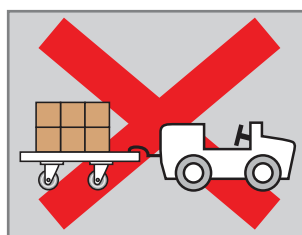

 
Do not hook a tractor trolleys, trams to ensure slow moving, accelerated slowly and do not exceed the movement speed of 4-6 km/h. Create a safe distance for people around by letting the vehicles running on separate lanes.

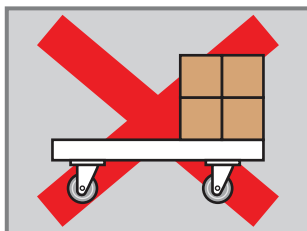


Line up evenly based on the platform. Much favor of one side may result a rollover.



 
Use the trolley system intended purpose. No climbing, playing on the platform.

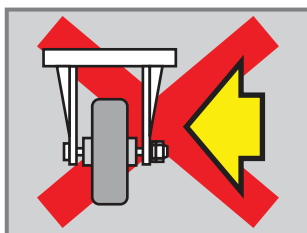

 
When operating the trolley with wheels fixed installation, you avoid horizontal forces impact on this type of wheel. If it's long-term impact or makes wheels turn, twist causing misalignment shorten the life of the product.

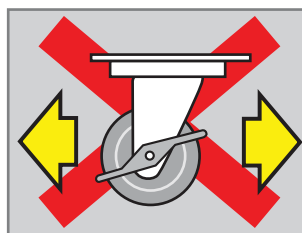

 Check the wheel in locked or not before pushing..

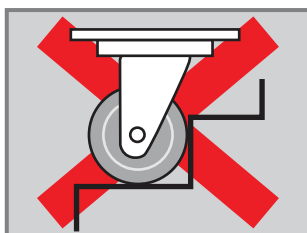

 
Do not push the car on the stairs, wheels are easy to be damaged by the impact of natural forces: vibration, inertial force when the cart "fall" from the top down to grade levels below.

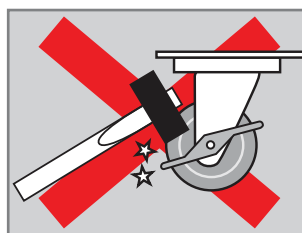


The design of the lock is required normal force to operate. Absolutely not apply grand force or it may damage the lock and parts.



 The cart should operate on even floor surfaces.

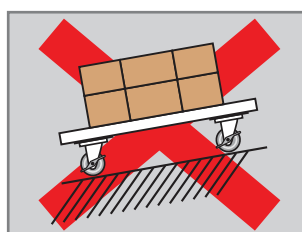

 Firmly lock the cart when stopping or parking on ramp. Also need to put additional warning signs for people around the car may be gone downhill.

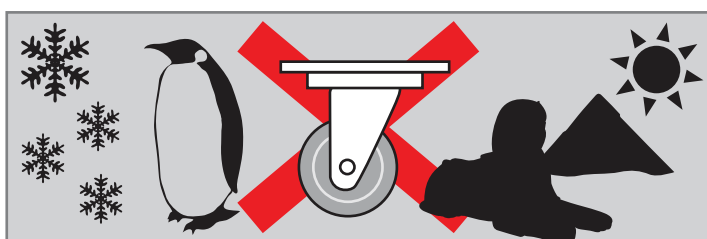

### Prevent the impact of weather conditions to normal operation:

- When unused put the trolley under roof to avoid sun and rain.
- If the temperature is too cold or too hot, a dedicated heat-resistant caster must be used.
- In sea area which is wet and salty, it is recommended to use caster with a stainless steel bracket of SUS 304 and PA wheel.